A. SIZE OF BALANCE WEIGHTS

The thickness of the weight shall be as follows:

Thickness of Sideplate Or Attaching Part of Wheel	Thickness of Weight to be Attached
Up to 3/16"	Not over the thickness of the part to which it is attached
Over 3/16"	3/16" or not over one- half the thickness of the part to which it is at- tached, whichever is greater.

B. LOCATION OF BALANCE WEIGHT (Except for Wheels having Balance Ring or Grooves)

The balance weight must be located at least one inch away from the edge or O.D. of the plate. It is to be fastened to the Sideplate, Centerplate, or Backplate only. (Except for the Series TVSR where it may be fastened to the Blade or Blade Gussett.)

C. MATERIALS TO BE USED

If the weight is to be bolted on, any convenient steel material will be satisfactory. If Wheels are made of corrosion resistant materials, similar materials should be used for the balance weights and fasteners. See Figures 16.2-1 and 16.2-2 for sizing and method of fastening.

If the weight is to be welded on, the material must be the same as the plate to which is is to be welded, or compatible with it from a welding standpoint.

D. METHOD OF FASTENING

Balance weights may be welded to most materials providing the proper welding procedure is used including electrode, pre-heat plate temperature, etc. It is the responsibility of the user to assure that the proper procedure is followed. Refer to the table below for recommendations, and to Section 1.2 Contract Data Sheets for Wheel material category.

I. LOW CARBON STEEL

Steels included in this category are:

Effective January 1982

(W) PDS	SAE or AISI No.	ASTM Spec.	Electrode
10110 DT		A284 Grd. D	E6014
10110 DS		A201 Gr. B	E6014

The size of the weld is to be the same as the thickness of the weight. Preheat temperature must not be less than $80^{\circ}F$.

II. LOW ALLOY STEEL

(W) PDS	SAE or AISI No.	ASTM Spec.	Electrode
10310 AC		A302 B	E 7018-A1
10310 AE	8620		E 7018-A1
10310 AG		A302 B	E 7018-A1
10310 BK	950	A242	E 7018
10310 BU		A441	E 7018
10310 FA		A387 C	E 8018-B2
10301 AJ		A606 Type 4	E 7018

The size of the weld is to be the same as the thickness of the weight. Preheat temperature must be not less than 80° F. Interpass temperature (adjoining plate temperature) must not exceed 400° F.

III. LOW ALLOY HIGH STRENGTH

Steels included in this category are:

(W) PDS	SAE or AISI No.	ASTM Spec.	Electrode
10310 BP		A514 Gr. A, G, D, E	E 11018-M

The size of the weld is to be the same as the thickness of the weight. Pre-heat temperature must not be less than 200°F. Interpass temperature (adjoining plate temperature) must not exceed 400°F.

No Rig Pui

IV. SPECIAL HIGH STRENGTH

	PDS	SAE or AISI No.	ASTM Spec.	Electrode
103	10 FJ		A542 C1.2	E 11018-M

The size of the weld is to be the same as the thickness of the weight. Pre-heat temperature must not be less than 250°F. Interpass temperature (adjoining plate temperature) must not exceed 400°F. The base steel must be maintained above the minimum preheat temperature for eight (8) hours after welding.

NOTE

To insure the integrity of the balance weight welds, magnaflux, dye check, or zyglo for cracks. Correct defects if indicated. As an alternate, balance weights may be fastened to the Wheel with bolts as follows:

Bolts are to be per American Standard ANSI B18.2.1. For temperatures up to 600° F, use Westinghouse PDS 70100 EA, ASTM A449, or ASTM A325 for the bolts and Westinghouse PDS 70210 BP or ASTM A194 Grade 1, or ASTM A325 for nuts. For 600° F to 900° F, use Westinghouse PDS 70100

DH, ASTM A193 Grade B7 for the bolts and Westinghouse PDS 70210 FD or ASTM A194 Grade 2H for the nuts. Use 1/2-13 nuts and bolts in all cases and torque the nuts to 75 foot/pounds. Refer to (Figure 16.2-1) to determine the number of bolts needed and attach the weight per Figure 16.2-2.

V. SPECIAL CORROSION RESISTANT

Plate Specification
ASTM B443 [(W) 15110CL]
Electrode Specification
ASME SFA 5.11 ENiCrMo-3 [(W) 15165DE]

The size of the finished weld is to be the same size as the thickness of the weight. Preheat temperature must not be less than 65°F. Interpass temperature (adjoining plate temperature) must not exceed 400°F.

NOTE

To insure the integrity of the balance weight welds dye check for cracks. Correct defects if indicated.

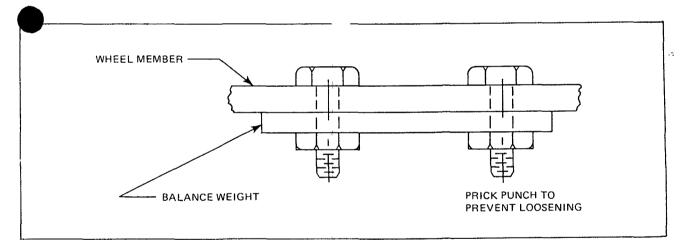


Fig. 16.2-1 Typical Balance Weight Bolting

STURTEVANT DIVISION MECHANICAL ENGINEERING STANDARDS

BOLTS PER POUND OF BALANCE WEIGHT (1/2-13 BOLTS)

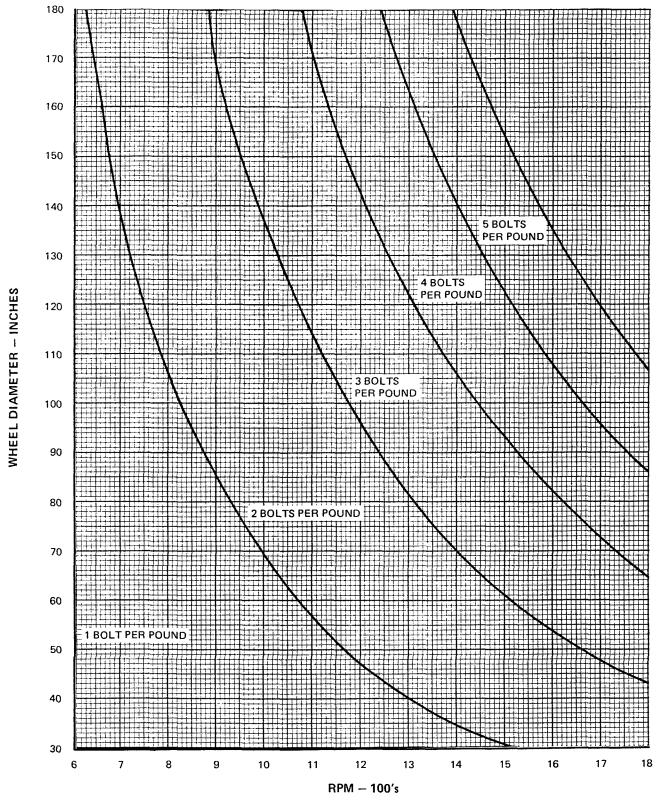


Fig. 16.2-2 Bolts per Pound of Balance Weight by Wheel Diameter vs Speed

Effective January 1982

Section 15.3 Start-Up Sequence



The following sequence should be followed when starting the Fan. This sequence contains the minimum requirements to be used and should be supplemented with plant system requirements and local safety code requirements.

CAUTION

PRIOR TO INITIAL START-UP OF THE FAN, THE STEPS IN SECTION 15.2, INSTALLATION CHECK LIST, MUST BE FOLLOWED BEFORE PROCEEDING WITH START-UP PROCEDURE.

- 15.3.1 Check and confirm the following (requirements):
- a. Proper Oil level in Fan Bearings.
- b. Oil level in Drive and Auxiliary Drive Train Bearings, etc.
- c. Lubrication System(s) are operating properly.

CAUTION

LUBRICATING OIL IN STEPS 15.3.1 a, b, AND c MUST BE AT THE PROPER LEVEL, TYPE, GRADE, OPERATING TEMPERATURE, AND BE FREE OF CONTAMINANTS BEFORE FAN IS OPERATED.

- d. All personnel, equipment, and foreign material are removed from the Fan and Fan System.
- e. All access doors in the Fan and System are closed and secured.
- f. All Fan dampers and/or Inlet Vane Controls are closed and linkages are properly connected and functioning.
- g. All Safety Guards and Systems are securely in place and functioning properly.

- h. Cooling medium to Fan Bearings and associated Drive Train(s) components are established and functioning properly.
- j. All personnel and foreign objects are clear of any parts that will move such as Shafts, Damper and/or Inlet Vane Control Linkages, Controllers, Cooling Wheels, etc.
- k. All personnel and foreign objects are clear of Inlets on Open Inlet Fans.
- l. Establish Main Drive power source.
- 15.3.2 Start Fan.
- 15.3.3 Immediately check the following items:
- a. Oil flow has been established in the Fan and Drive Train Bearings.
- b. Vibration levels of the Fan and Drive Train are within the allowable operating range for the Fan RPM.
- c. All Shaft Seals are free and not rubbing on Shaft.
- d. Establish air flow by opening Dampers/Vanes to prevent friction heat build-up and thermal distortion of the Rotor.

WARNING

IF ANY OF STEPS a THROUGH d ARE NOT MET, THE EQUIPMENT SHOULD BE SHUT DOWN IMMEDIATELY. FIND AND CORRECT THE CAUSE(S) BEFORE RESTARTING THE EQUIPMENT.

15.3.4 Place Fan in normal operation mode when step 15.3.3 is satisfactory.

Effective January 1978

Westinghouse Electric Corporation

Sturtevant Division Hyde Park, Boston, MA 02136

WESTINGHOUSE STURTEVANT — TECHNICAL SERVICES

INSTALLATION CHECKLIST/REPORT

GENERAL INFORMATION	Date of Inspection				
A. Customer Data					
1. Customer:	6. G.O. and Item #:				
2. User:	7. Customer Fan ID:				
3. Station/Plant:	8. Name and Title of Contact:				
4. Unit:					
5. City, State:					
9. Possession by customer of proper dwgs. a	and installation books:				
10. Reason for Inspection:					
a. Erection(Sec	ctions I - IX, XII)				
b. New Installation Checkout/Inspection	b. New Installation Checkout/Inspection(Sections I - IX, XII)				
c. Start-up(Sec	c. Start-up(Sections I - IX, XI, XII)				
d. Maintenance, Installation Checkout/Ir	d. Maintenance, Installation Checkout/Inspection(Sections I - XII)				
e. Other	e. Other				
11. Note if Installation has been previously in	nspected by WSD				
Date					
B. Fan Data					
1. Size	7. Design Gas Temp.				
2. Width: SWDI DWDI	8. Contract Dwg. No.				
3. Duty	9. Driver:				
4. Arrangement:	a. Type and Make				
5. Class/RPM	b. Horsepower				
6. Rotation	c. RPM				
OTE:					
	in the space provided on the last page of this report.				
	•				
All required measurements are to be recorded in	reach checkpoint where applicable. Draw line through space if				

checkpoint does not apply.

I.	FO	UNDATION - SOLEPLATE - PEDESTALS		
			FIXED	FLOAT
		Inspect for proper installation of soleplate/foundation shims. (Straddling anchor bolts as per WSD standards.)		
	В.	Inspect interfaces of foundation - soleplate - pedestal. (Min. 80% contact.)		
		1. Foundation - soleplate		
		2. Soleplate - pedestal		-
	C.	Note configuration of foundations:		
		1. Sloped (Note angles)		
		2. Number of sides (sloped)		
		3. Size of foundation pier's top surface		
	D.	Inspect and check tightness of all fasteners:		
		1. Pedestal to soleplate bolts		
		2. Anchor bolts		
	E.	Inspect and measure for proper minimum clearance between foundation and casing. (Note actual dimension.)		
	F.	Verify installation of hardened steel washers on anchor and pedestal hold-down bolts.		***************************************
II.	BE	EARINGS	.7	
	A.	Specifications (Fixed and Float Bearings)		
		1. Type		
		2. Manufacturer		
		3. Size		
		4. Cooling Type		
		5. Lubrication Type (Viscosity)		
		6. Features and Details		
	В.	General: All Type Bearings		
		1. Inspect for any possible damage resulting from shipping and/or assembly.		
		2. Inspect bearings for dirt and rust.		
		3. Inspect lubricant for possible contamination.		
		4. Inspect flexible connections in cooling lines (if applicable).		
		5. Check for proper installation of shims under bearing housing.		
		6. Inspect and check tightness of bearing housing hold-down bolts.		
		a. Verify installation of hardened steel washers under bolt head and nut.		
		7. Check for proper alignment of bearing housing and shaft.		

,		FIXED	FLOAT	
C.	Sleeve Bearings:	· · · · · · · · · · · · · · · · · · ·		
	1. Check and record clearances:			
	a. Radial clearance (on 4 corners of sleeve).		-	
	b. Thrust collar-sleeve clearance.			
	2. Inspect for proper installation and operation of bearing accessories.			
	3. Check for proper oil level in bearing sump.			
	4. Check for proper installation and fit of bearing seals around shaft.			
	5. Applicable to SAWC and Dodge bearings:			
	a. Check for proper functioning of oil rings.			
	b. Inspect and tighten bearing adjusting bolts.			
	c. Inspect for water leakage of cooling connection.			
	d. Inspect for proper lower spherical seat - sleeve contact.			
	6. Applicable to WSD H.D. bearings:			
	a. Check for proper installation of:			
	1. Oil discs	*****		
	2. Oil scoops	-		
)	3. Orifice plate	***************************************		
	 b. Check for proper sleeve - bearing housing clearance. (Record actual dimension.) 		•5	
	 c. Check for proper clearance of oil discs at: (Record actual dimensions.) 			
	1. Oil scoop			
	2. Orifice plate			
	3. Radial shelf			
	d. Check for proper installation of shims at bearing housing split.			
	1. Thickness (Record actual dimensions)			
D. A	Anti-Friction Bearings:		·	
1	. Inspect for:			
	a. Looseness			
	b. Movement			
2.	. Check locking collar device for tightness			
3.	. Check for proper lubrication			
4.	Inspect seals for proper installation and fit.			

						FIXED	FLOAT
١٧.	SH	IAFT					
	A.	Visually inspect shaft for any site handling.	-	_			
	В.	Inspect shaft journals and thru	st collars.			and the second s	
	C.	Check and record distance bet	ween thrust collars.				
		1. Check and record collar ru	nout				
V.	WI	HEEL	,				
	A.	Check that the wheel installed	is of the correct rote	ation			
	В.	Inspect for shipping and/or in	stallation damage.				
VI.	HC	OUSINGS					
	A.	Inspect for all required field w	velds.				
	В.	Inspect for possible damage re	sulting from shipping	g and/or asse	mbly.		
	C.	Check for proper housing inle	t/wheel alignment.				
		1. Record radial clearance be	tween inlet and whee	l:			
		a Inboard		b	Outboard	. .	
		2. Record axial clearance/ove	rlap between inlet ar	nd wheel:			
		a Inboard		b	Outboard		
						FIXED	FLOAT
	D.	. Inspect shaft seals for proper	installation.			TIXED	<u> </u>
		1. Check for available clearar		ntraction and	freedom		
		of movement. 2. If seal is pressurized, check	for proper air conne	ections.			

7				MAIN DRIVE	AUX. DRIVE
II. <u>COU</u>	PLING(S)				
A. C	Coupling type(s) and make(s).				
B. I	nspect for proper lubrication.	1			
	Check and record alignment in cold condition: . Main Driver:				
1	. Main Dirver.				
	a Rim	b	Face		
2	2. Auxiliary Drive:				
	a Rim	b	Face		
					
D. (Check and Record Face Gap.				
	N				
.	a. Min	b. Max_			
E. C	a. Min Check for proper installation of distance plate				
E. (ā
E. (Check for proper installation of distance plate			FAN	FAN
E. (Check for proper installation of distance plate			FAN OUTLET	
	Check for proper installation of distance plate				FAN
III. <u>DUC</u> A. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft	(if applicab			FAN
III. <u>DUC</u> A. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft Note distance/degree.)	(if applicab			FAN
III. <u>DUC</u> A. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft	(if applicab			FAN
III. <u>DUC</u> A. N () 1 B. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft Note distance/degree.) Note if elbows are equipped with turning value of there are any rapid duct expansions.	of fan.			FAN
III. <u>DUC</u> A. N () 1 B. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft Note distance/degree.) . Note if elbows are equipped with turning values.	of fan.			FAN
III. <u>DUC</u> A. N (1 1 B. N	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft Note distance/degree.) Note if elbows are equipped with turning value of there are any rapid duct expansions.	of fan.			FAN
A. N. () 1 B. N. 1 C. E	Check for proper installation of distance plate a. Record Thickness Dimension CTWORK CONNECTIONS Note if there are any sharp elbows within 50 ft Note distance/degree.) . Note if elbows are equipped with turning value of there are any rapid duct expansions. . Note dimensions of expansions, if applicable	of fan.			FAN

IX. ADDITIONAL EQUIPMENT

A. Packaged Lubricating Systems (If Applicable)	
1. Source of lubrication	
2. Inspect oil lines for the following:	
a. All lines flushed out	
b. Return lines pitched to WSD standards	
c. Possible oil leakage in all connections and lines	
3. Check for contaminants in oil	
4. Check interlocks between oil supply and main driver	-
5. Check interlocks between primary and auxiliary pumps	
6. Check oil heater operation per specs	
7. Check oil cooler operation per specs	
a. Note oil cooling system type	
8. Visually inspect the following:	
a. Temperature gauge reading on lube console	
b. Pressure gauge reading on lube console	
c. Pressure of oil supply lines at flow control valve - Fixed	, Float
d. Oil level in lube console as indicated by:	
1. Sight glass - static check	
2. Dip stick - operating check	
e. All piping and fittings for possible leakage	
9. Inspect for unusual mechanical noises from:	
a. Pump and motor assembly(s)	
b. Fan and motor on air cooled heat exchanger(s)	
10. Check proper operation of oil breather and filter	
11. Verify open heater vent hole	
12. Check for proper rotation of:	
12. Check for proper rotation of: a. Pump motor	

B.

B. Vane Control and Damper(s): Operation and Travel

1.	Inl	et Vanes (If Applicab	ole)		1						
	a.	Visually inspect all ex	xposed vane	parts and	linkage fo	or possible	shipping a	nd/or as	ssembly	damage,	and

	for freedom of movement.
b.	Check tightness of all fasteners

c.	Check for proper rotation of inlet vane(s)	
----	--	--

- d. Check levers for proper size and orientation
- e. Measure operating shaft rotation (degrees)

		1 0 0		
	f.	Check travel of actuator and linkage against the travel of vanes and link synchronization.	age, and vane	
	g.	Check for lubrication of external linkage bearings.		
			INLET	OUTLET
2.	In	let and Outlet Dampers (If Applicable)		
	a.	Visually inspect all exposed parts and linkages for possible shipping and/or assembly damage, and for freedom of movement.		
	b.	Check for tightness of all fasteners.		
	c.	Check internal parts for alignment and clearance.		<u></u>
	d.	Check for proper blade orientation of inlet and/or outlet dampers.		
	e.	Check for proper rotation of inlet damper(s).		
	f.	Check for lubrication on all bearings (if applicable)		
	g.	Check travel of actuator and linkage against damper leaf and linkage travel.		
	h.	Check synchronization of both inlet dampers (if applicable).		

IX.	C.	Turning	Gear	Assembly	(If	Applicable))
-----	----	---------	------	----------	-----	-------------	---

1.	Ins	Inspect for:						
	a.	Proper alignment						
	b.	Tightness of all fasteners						
	c.	Proper rotation of over-running clutch assembly						
	d.	Proper rotation of turning gear motor						
	e.	Proper lubrication						
	f.	Main fan drive motor rotation (must be verified before						

x. ADDITIONAL INSPECTION (Applicable only if fan has been in service.)

		FIXED	FLOAT
A.	Foundations		
	1. Inspect the following for cracks or other significant damage:		
	a. Bearing Foundation(s)		
	b. Fan Foundation		
В.	Bearings		
	 Overall inspection of bearings for cracks, corrosion, leakage, wear, and contaminants. 		-
	2. Inspect babbitt on sleeve bearings (if applicable) for wear, pitting, scoring, and looseness.		grade MATERIA, prop.
	3. Inspect bearing sleeve-housing spherical seat contact (if applicable).		
	4. Inspect bearing seals for excessive wear and leakage.		
	5. If anti-friction bearings are used, inspect for wear, looseness, and unusual mechanical noises.		
C.	Shafts		
	1. Visually inspect shafts for wear, cracks, and corrosion.		
	2. Mechanically inspect for shaft runout.		
	3. Inspect shaft seals for excessive wear.		
D.	Wheels		
	1. Visually inspect all parts for wear, cracks, corrosion, erosion, and material build	i-up	
	2. Inspect condition and tightness of rivets or studs.		
	3. Inspect for possible axial movement of wheel along shaft.		
E.	Housings		
	1. Inspect for cracks, corrosion, erosion, and material build-up.		
F.	Coupling(s)		
	1. Inspect for teeth wear: Main Driver, Aux. Driver		
G.	Vane Control and Damper(s)		,
	1. Inspect all parts for wear, erosion, corrosion, and material build-up.		
	a. Inlet Vane Control(s)		
	b. Inlet Damper(s)		
	c. Outlet Damper(s)		

XI. O	PERATION (If fan is run at this time)					
A	. Bump fan and verify that wheel rotat	es in the pr	oper direc	tion		
В	. Check bearing vibration amplitude ar	nd phase - as	s found ini	tially.		
_	1. Fixed Bearing: H, Ph_				, A	, Ph
	2. Float Bearing: H, Ph_	,	V	_ , Ph	, A	, Ph
C	. Perform field balancing if required; r	ecord final	readings:			
	1. Fixed Bearing: H, Ph_			_, Ph	, A	, Ph
	2. Float Bearing: H, Ph_	,	V	_, Ph	, A	, Ph
	3. Amount of weight added: IB					
I	O. Check bearing temperature					
	1. Fixed					
	2. Float					
]	E. Check bearing oil temperature					
	1. Fixed					
	2. Float					
	F. Verify operating integrity of bearing	g seals				
	1. Fixed					=
	2. Float					
	G. Check bearing oil level as indicated	by oil regul	ator (if ap	plicable).		
	1. Fixed					
	2. Float					
	H. Auditory check for unusual mechan	nical noises				
	I. Recheck for proper operation (if a	pplicable)				
	1. Lube Unit					
	2. Inlet Dampers					
	3. Outlet Dampers					
	4. Inlet Vane Control					
	J. Inspect all Stuffing Boxes on Dam	pers for lea	kage (if ap	plicable);		

tighten if necessary.____

A.	Comments and deviations from the above:
	·
B.	Note if inspection performed was not complete.
	1. Reason
	2. What components require further inspection.

Dates of Job.		

Certified by WSD Rep.: ______ Date: _____

Accepted By:

Name _____ Title ____ Company ____ Date ____

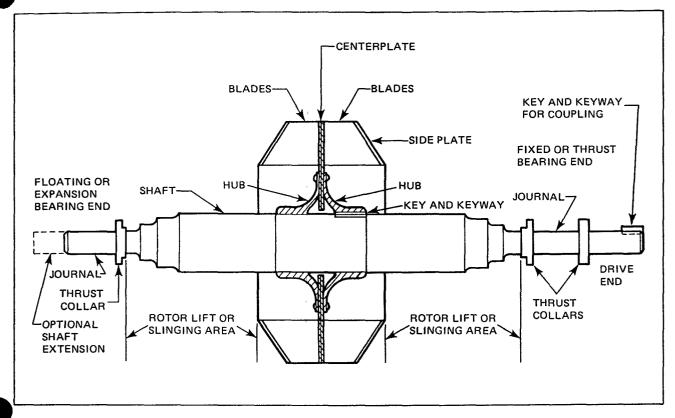


Fig. 5.7.1-2 Typical Rotor Component Identification

determined from the Main Drive end as specified by customer. See Figure 5.7.1-3 for Rotation and Wheel Blade Types.

- 6. Identify and move Fan Inlets or Vane and Inlet Assemblies to their respective Rotor ends.
- Inlets without Vanes are interchangeable and can be assembled to either side of Double Width-Double Inlet Fan.
- Vane and Inlet Assemblies are NON-interchangeable, and must be installed on the correct side of fan. Refer to Section 8 - Inlet Vane Controls, Preparation for Installation.

NOTE

Refer to Contract/Main Assembly Drawing for position of Vane Operating Lever. Vane Operating Lever must be in that approximate position when Vane and Inlet Assemblies are placed on Rotor.

7. Guide Inlets or Vane and Inlet Assemblies on Shaft. Place in approximate installation position; support securely to prevent damage to equipment or injury to personnel.

January 1978

NOTE

Assure that all Non-Split Inlet Parts, such as Inlet Vane Control Seal Parts, are placed on Shaft in proper installation sequence.

8. Pressurized Air Shaft Seals Only

Refer to Contract/Main Assembly Drawing, if Pressurized Air Shaft Seal Assembly is listed in Bill of Material; refer to Section 11.3 for seal details. (If not listed, proceed to Step 9.)

Seal Bodies are to be placed on the Rotor in their respective position to their location on the fans.

CAUTION

SEAL BODIES HAVE MACHINED SURFACES AND MUST BE HANDLED WITH CARE.

Insert a minimum of four (4) wooden wedges between machined Seal Body inside diameter and Shaft outside diameter and secure into position.

9. Install Bearings on Rotor. Refer to Section 6 - Bearings.

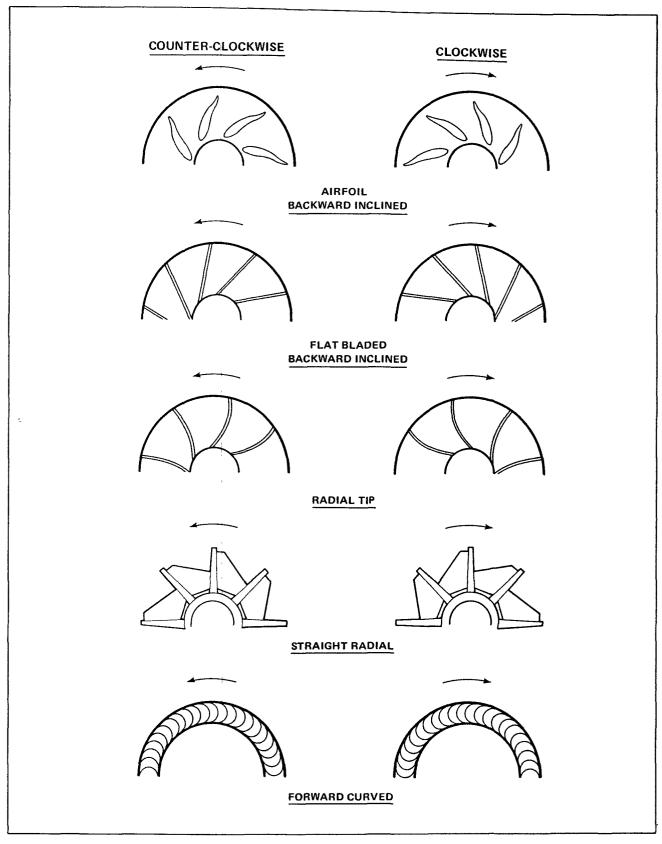


Fig. 5.7.1-3 Wheel Blade Types and Rotation

TEST: 5300DC DATE: 08-28-83

KCY-5300 FULL SIZE FACTORY TEST. TVAF-3 DWDI 'B'. TEST RAN AT 318 RPM.

Fan #	Dia: 136.5	54 in Spd: <u>HP</u>	954 rpm <u>TP</u>	Dens: .0409 <u>SP</u>	16/ft3 ⁻ <u>TE</u>	Flow Area:214.600 ft2 SE
1	16386	2347.094	35.136	35.136	.0386	.0386
2	417406	4368.252	38.578	38.456	.5800	.5781
3	690217	5795.344	38.650	38.320	.7242	.7181
4	857991	6039.418	40.997	40.494	.9164	. 9051
5	991387	7196.582	43.781	43.114	.9488	.9343
6	1075839	7656.830	42.497	41.709	.9394	. 9220
7	1137028	7828.016	40.805	39.922	. 9325	.9124
8	1180221	7945.047	39.583	38.629	.9251	. 9828

